


LT-610 USER MANUAL

★ Product Graphic

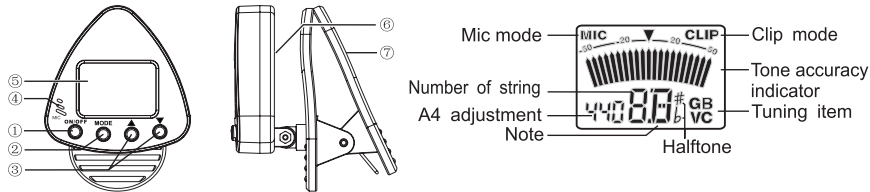

★ Parts function and description

- ① Power: Press it to switch the tuner on, press it to select "Mic" or "Clip" mode.
- ② Mode: Press it to choose tuning item: C(chromatic), G(guitar), B(bass) or V(violin).
- ③ A4 frequency adjustment: Press it to adjust A4 frequency. The default standard frequency is 440Hz, the range is 430Hz--450Hz.
- ④ Mic: Sound signals receiver.
- ⑤ LCD
- ⑥ Battery cover
- ⑦ Clip

★ Using Method

- Press power button **ON/OFF** to switch on the tuner and choose "Mic" or "Clip" mode. when selecting mode MIC, please put the Mic receiver window to the part producing sound as close as possible. when selecting mode "clip", please attach the clip directly to the headstock, and adjust the display screen to your preferred viewing angle.
- Press button **MODE** to select tuning item: C(chromatic), G(guitar), B(bass) or V(violin)
- Press button **▲** or **▼** to adjust A4 frequency, the range is 430Hz--450Hz.

★ Tuning accuracy indicator

- Low: Indicator is on the left, showing red.
- High: Indicator is on the right, showing red.
- Accurate: Indicator is in the middle, showing green.

★ Parameter

| | | | |
|----------------------|--|-------------|--------------------------|
| Signal receiver mode | MIC, CLIP | LCD display | Color back-light display |
| A4 frequency range | 430--450Hz | Battery | CR 2032 |
| Tuning range | 0A--7C | Dimension | 53x80x43mm |
| Tolerance | ±1cent | Weight | 60g |
| Tuning item | C (Chromatic), G (Guitar), B (Bass) & V (Violin) | | |